

How can I adjust roof measurements in the Roof task?

To see the roof dimensions, click on the corner of the roof.

This will show you the dimensions of the two adjoining sides. You can click on either of these figures to enter a new figure. It's the same process for checking and adjusting the dimensions of chimneys, vents, etc.

Revision #3

Created 5 September 2024 16:26:22 by Yasmin Bettles

Updated 9 May 2025 14:10:56 by Daisy Kernick