

I added a hybrid inverter to 'My Components' but can't add a battery to it in the Inverter Task.

If you are trying to use custom Hybrid Inverter and Battery components - you will need to make sure you have added the battery as its own component. You can do this under **Components > Edit Batteries**.

Make sure you select the checkbox under 'Rules' to set its compatibility with your custom inverter category!

Revision #2

Created 5 September 2024 16:50:41 by Yasmin Bettles

Updated 19 December 2024 10:50:43 by Daisy Kernick