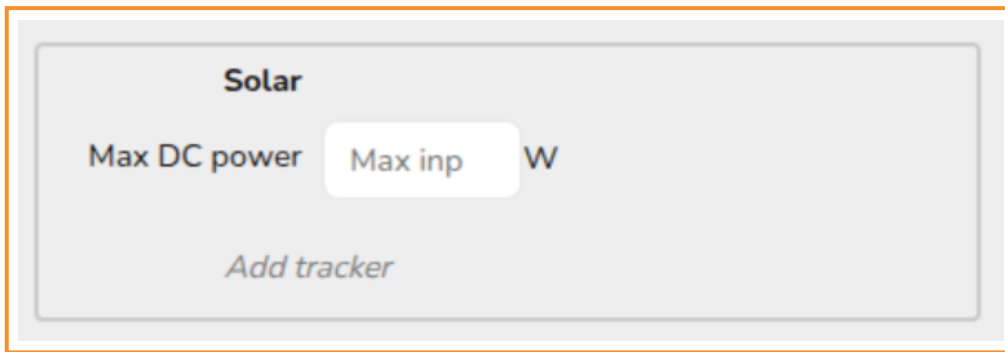


I have added a new inverter in 'My Components', but I'm unable to allocate panels to its inputs. How do I fix this?

When you add an inverter and are having difficulty, you will need to navigate back to **My Components** and open the inverter you have added. Under the **Solar** section make sure you have added trackers, if you have not added them the **Solar** section will look like this:

A screenshot of a software interface for configuring an inverter. It features a light gray rectangular panel with a thin orange border. At the top of the panel is the word "Solar" in bold. Below it, the text "Max DC power" is followed by a white input field containing "Max inp" and a "W" unit. At the bottom of the panel is a link that says "Add tracker" in a lighter gray font.

Check on the manufacturer's datasheet to see how many trackers there are for the inverter. Click the **Add tracker** option in the solar section on the right and input the relevant information. Once this is filled in you will be able to allocate the panels to the input.

Revision #4

Created 5 September 2024 16:49:05 by Yasmin Bettles

Updated 23 December 2024 15:29:16 by Daisy Kernick