
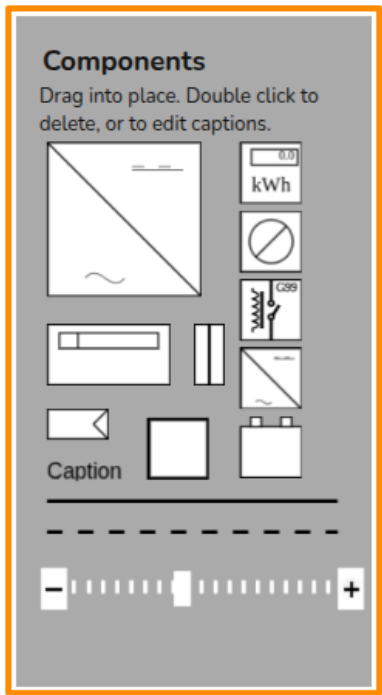


Why has my schematic not updated after I changed some components in the project?

The Schematic does not automatically refresh after changes are made to the project.

If you've changed a component and you want this reflected in the schematic, you can either edit it manually using the components on the side or click **Refresh** to rebuild the schematic from the project components.

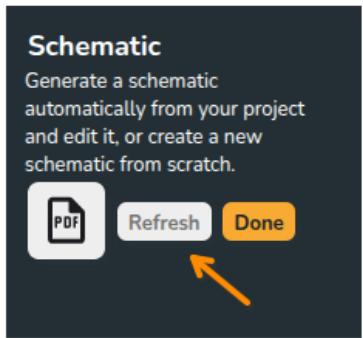

Revision #5

Created 15 July 2026 14:06:00

Updated 3 August 2026 11:21:22 by Saira Noor