

# Performance task defaults

This guide applies to [beta.easy-pv.ie](https://beta.easy-pv.ie) versions of Easy PV. The information provided here may not be accurate for [easy-pv.co.uk](https://easy-pv.co.uk), [easy-pv.com](https://easy-pv.com) and [easy.pv.ie](https://easy.pv.ie).

The performance task can be streamlined by configuring your settings in **My account > Preferences > Performance**. Here you have the option to configure whether you want panel allocation and sunpaths to be automated.

## Panel allocation

Choose between:

- **Automatically allocate panels:** use auto-stringing to automatically make a string plan without any input needed from you.
- **Suggest allocation:** use auto-stringing to make a string plan which it will suggest for you to accept or edit manually.
- **Manually allocate panels:** manually construct your string plan, with the option to use auto-stringing when you do so.

## Sunpaths

With 3D and Magic design mode, by modeling any nearby obstructions, Easy PV can automatically calculate any shading losses. Here you can choose whether you want this to be done automatically or whether you would like it to remain manual for 3D projects.

---

Revision #2

Created 11 February 2025 11:40:27 by Daisy Kernick

Updated 11 February 2025 14:50:03 by Daisy Kernick